

## Configuring Traktor Pro/Duo for the DJ Console Rmx (OS X version)

### *1- Configuration of the MIDI channel*

From the DJ Console control panel, go to the **ADVANCED** tab, and make sure that MIDI channel is set to **1**.


This is very important as the TSI profile provided is configured for the DJ Console Rmx to work on this channel.

If you have multiple MIDI controllers, or would like to use the DJ Console on a different MIDI channel, you will need to modify the TSI profile accordingly. Consult Traktor's user manual for more details.




## 2- Audio configuration in Traktor Pro

a) From the main menu, click on **PREFERENCES**, and select **AUDIO SETUP**. Choose **Hercules DJ Console Rmx** as **Audio Device**. You can also adjust the AUDIO LATENCY.

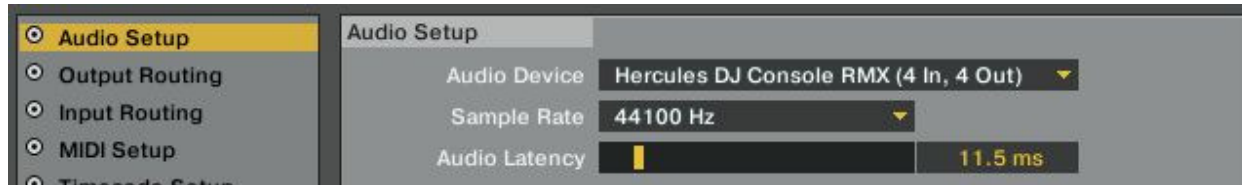

b) Under **Output Routing**, set Output 3 & 4 for **Monitor** and Output 1 & 2 for **Master**.

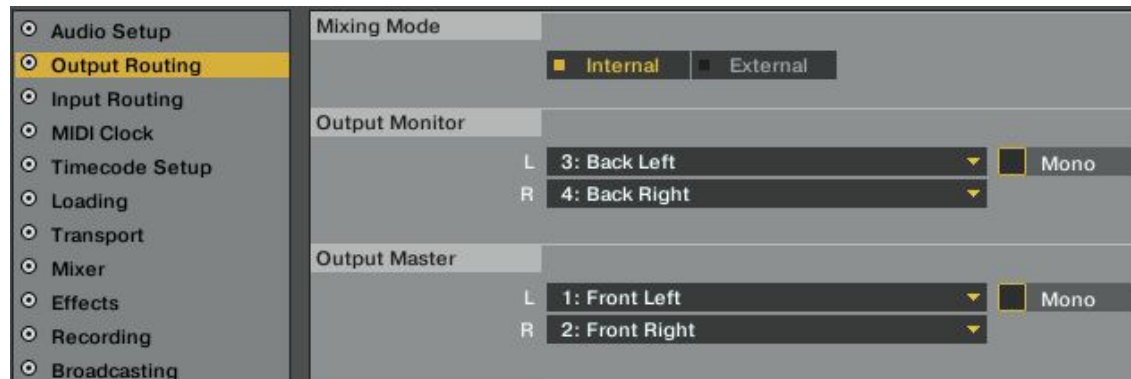

OS X Snow Leopard (10.6)

OS X Tiger (10.4) / Leopard (10.5)




c) If you are using external sources, for **Input Routing**, select the DJ Console inputs for channels A&B.



**OS X Snow Leopard (10.6)**

OS X Tiger (10.4) / Leopard (10.5)

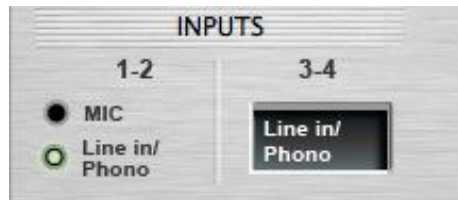

Don't forget to select the appropriate source Input type in the **DJ Console control panel**.

Using the **Source** buttons on **Deck A&B** will allow Traktor to switch between Internal and External playback




### 3- Configuration of the Midi controllers in Traktor Pro/Duo (Version 1.27)

a. At the bottom of the configuration menu, click the **Import** button to locate and select the **.TSI** configuration file.



b. **Controller Mapping, MIDI Device Setup** and **Effects Settings** should be selected before clicking OK

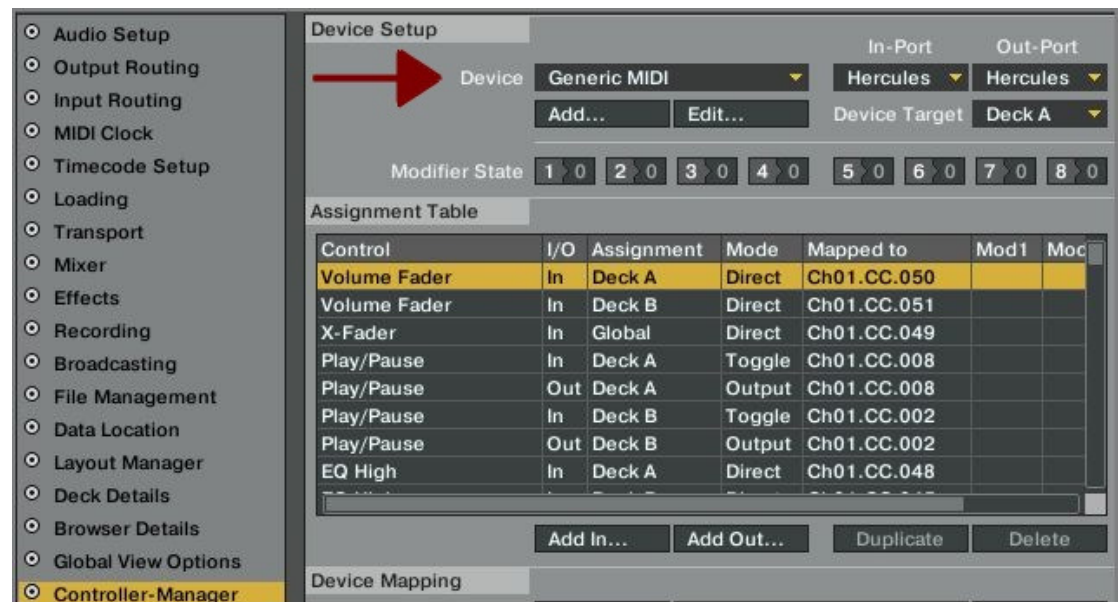

c. In **Controller-Manager**:

-For Device, select **Generic MIDI-DJ Console Rmx**

- Do the same for both **In-Port** and **Out-Port**.

This menu also give you access to the various MIDI settings, should you wish to modify them.



## **MIDI Layout for the DJ Console Rmx and Traktor Pro/Duo**


**NOTE:** The terms used are those employed in Traktor

Main Configuration: **BALANCE knob set to RIGHT**

- A-** Deck Input Select
- B-** Deck Gain
- C-** EQ (Bass/ Mid/ Treble) and EQ Kill
- D-** Scratch On/Off
- E-** Tempo bend -
- F-** Tempo bend +
- G-** Loop:
  - 1: Loop Size -Previous
  - 2: Loop Set
  - 3: Loop Size -Next
- H-** Cues
  - 4: Previous Cue/Loop
  - 5: Cue Set /Store
  - 6: Next Cue/Loop
- I-** Tempo
- J-** Seek position
- K-** Monitor Cue
- L-** Load Selected
- M-** Sync
- N-** Jog Scratch - Tempo bend
- O-** Volume fader
- P-** Master Volume
- Q-** Cue
- R-** Seek position: (**Stop – return to start**)
- S-** Play/Pause
- T-** X-Fader
- W-Play/Pause
- X- X-Fader



## Navigation/ browser:

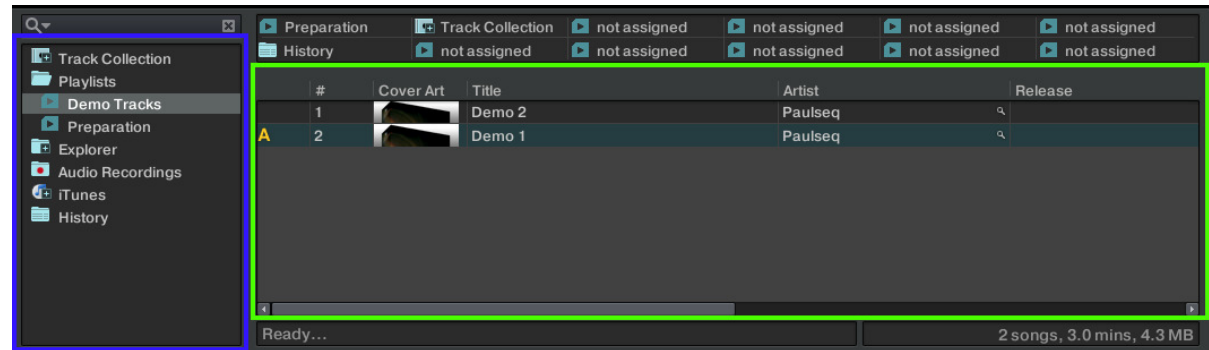

## Folder navigation

- **Left:** Open Browser toggle
- **Left + Up/Down:** Step browsing
- **Left + Right:** Expand/Collapse




- **Folder +** : Fast browsing

## Playlist navigation (Default)

- **Up/Down** : Step browsing
- **Right:** Open Browser toggle




- **Right +** : Fast browsing

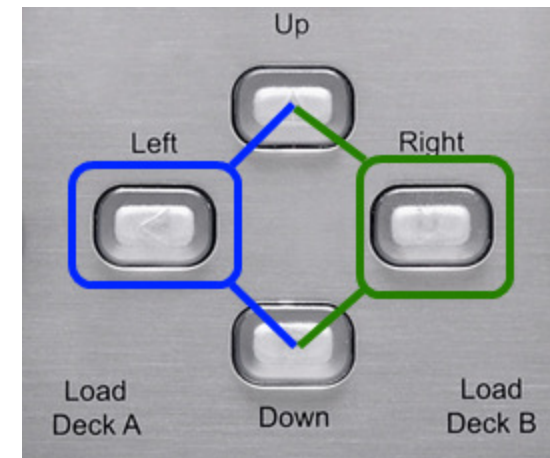



FX (Group): BALANCE knob set to LEFT/ Beat Lock LED On

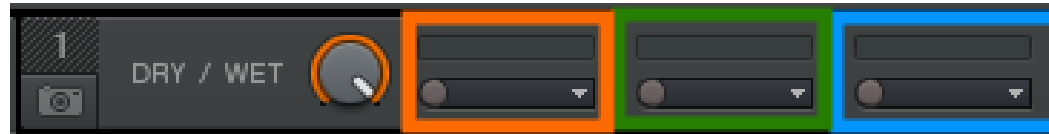

**1-** Effect 1 On      **4-** Effect 1 select

**Treble:** Effect 1 amount


**2-** Effect 2 On      **5-** Effect 2 Select

**Mid:** Effect 2 amount

**3-** Effect 2 On      **6-** Effect 2 Select

**Bass:** Effect 2 amount

**A-** Effect Unit 1  
**B-** Effect Unit 2

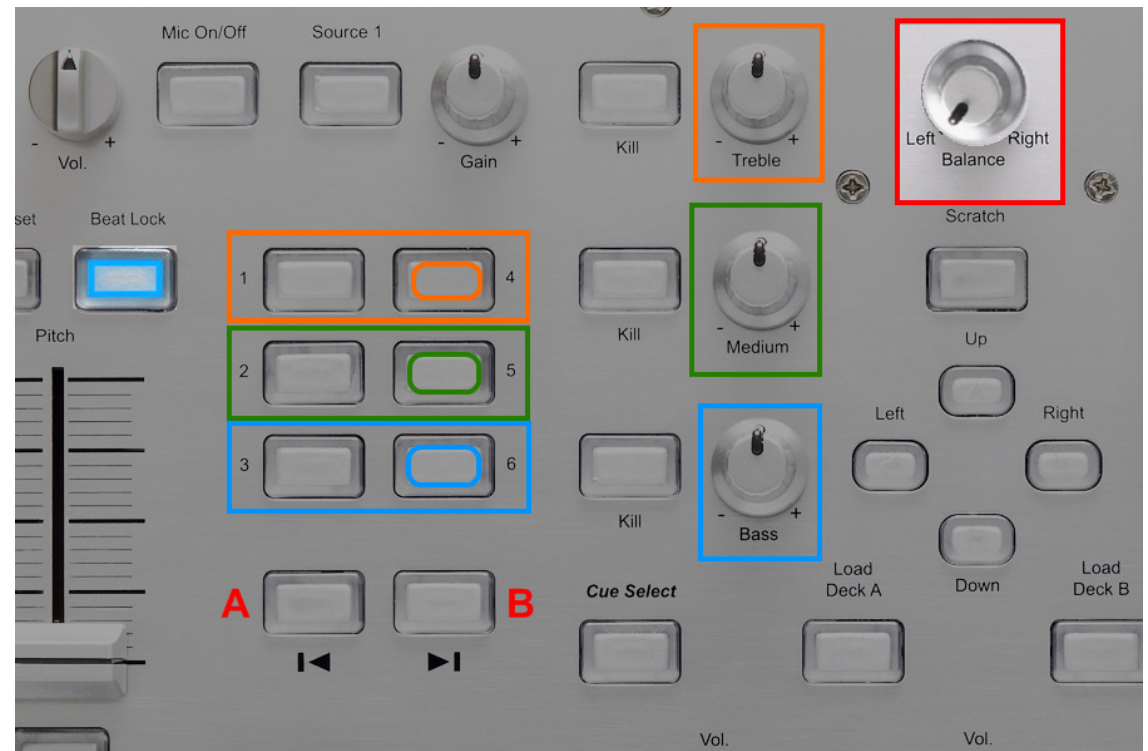

## Midi controllers map

